

# User Guide

**HONOR**

# Contents

## Get to know your computer

Appearance	1
Powering on and off	3
Charging the computer	4
Keyboard	4
Touchpad	5
Getting started	6

## Highlighted features

HONOR Device Clone	8
Log in to Your HONOR ID	8
Cast Your Phone Screen to Your Laptop	9
Share Your Laptop Screen with Your Tablet or Foldable Phone	11
Wirelessly Cast Your Laptop Screen to Larger Displays	12
HONOR Share	13
HONOR WorkStation	15
<b>HONOR Connect</b>	15
<b>Connected Call</b>	15
<b>Connected Notification</b>	16
Connected Apps	17
<b>Connected Input</b>	17
Tethering	18
Connected Camera	18
Capture Your Inspirations Using Camera Across Your MagicRing Devices	19
Favorites Space	19
HONOR Notes	20
Privacy Projection	21
More Tips	22

## Learn about Windows 11

Using the Start menu	24
Action center	24

## Accessories and extensions

Bluetooth mouse (optional)	26
----------------------------	----

## About this user guide

## Safety information

 
## Personal Information and Data Security

 
# Legal Notice


# Get to know your computer

## Appearance

**i** Keyboard layout varies by country or region. Actual product may differ.

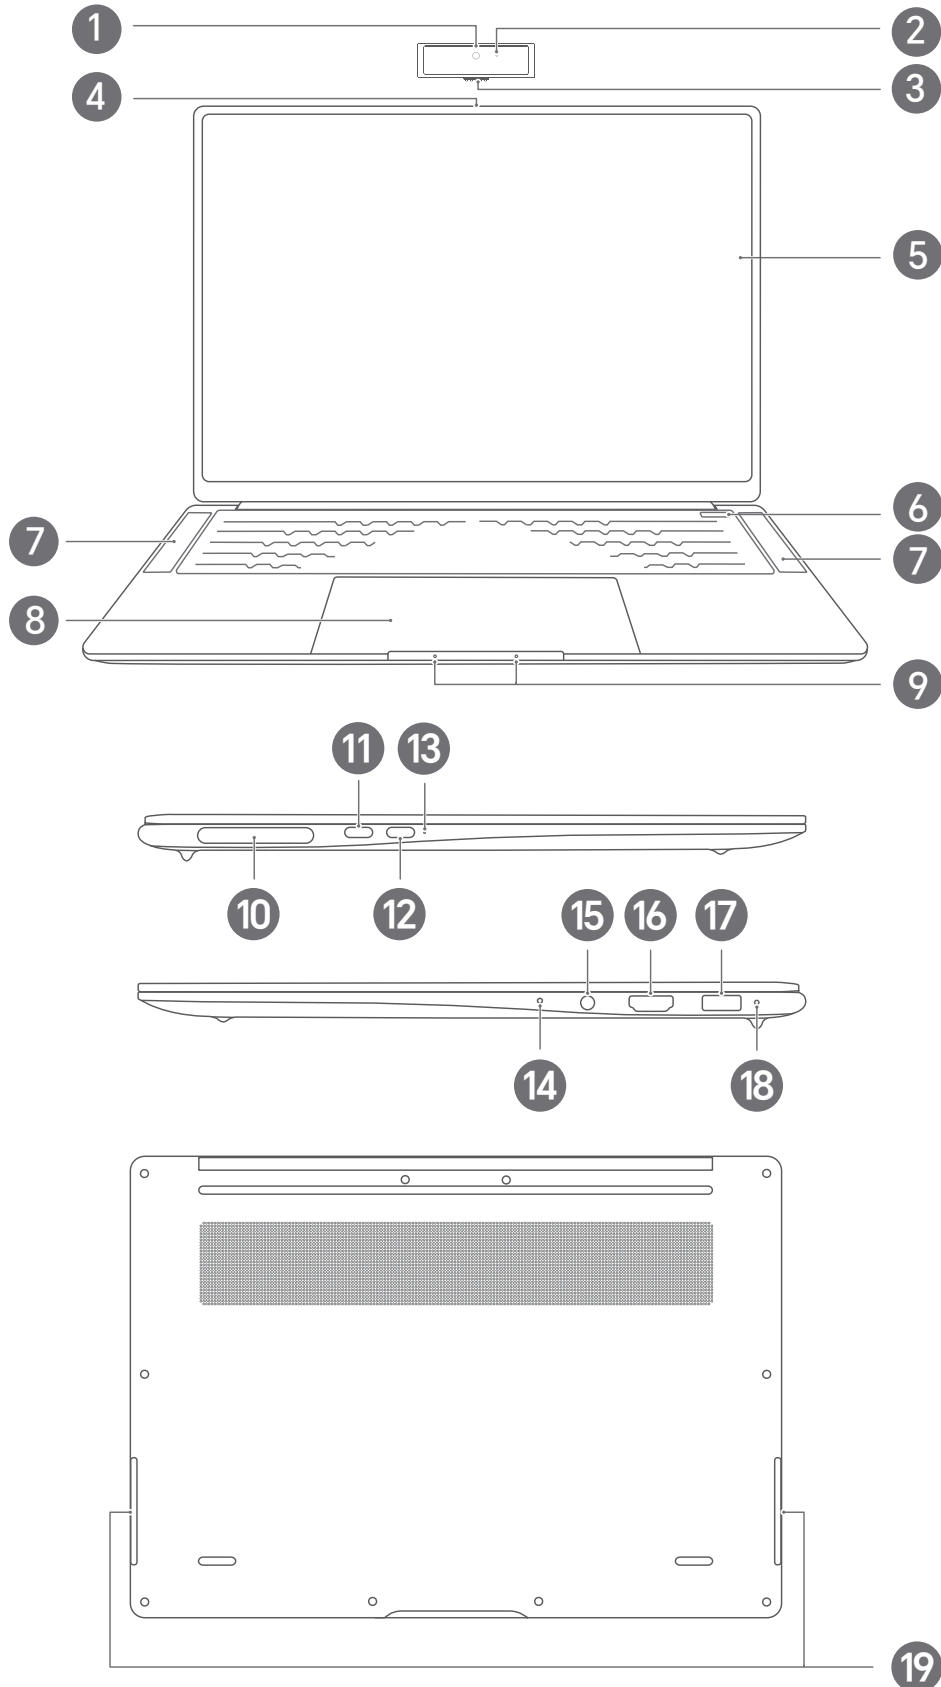

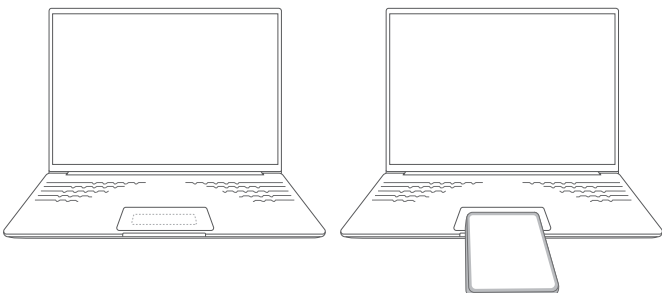

1	<b>Detachable camera</b>	Can be used to take photos or videos. It supports plug-and-play and can be placed in the storage compartment for privacy security.
2	<b>Camera indicator</b>	Indicates the camera's status. Lights up steady white when the camera is active.
3	<b>Camera port</b>	This is a magnetic type of port.
4	<b>Camera base</b>	Absorbs the camera and connects to a computer.
5	<b>Touchscreen display</b>	Touch the screen to operate the computer.
6	<b>Fingerprint power button</b>	After enrolling a fingerprint, simply press the power button with the enrolled finger to power on and unlock the computer without having to enter a password.
7	<b>Speaker</b>	The speakers output sound.
8	<b>Touchpad</b>	<ul style="list-style-type: none"> <li>• Provides similar functionality to a mouse. A convenient way to control the computer.</li> <li>• Tap the NFC detection area on some Honor phones against the HONOR Magic-link sensor on the computer to use the HONOR Magic-link feature.</li> </ul> <p>HONOR Magic-link sensor is located approximately in the center of the touchpad. It is not externally visible.</p> 
9	<b>Microphone</b>	Use the microphone to conduct video meetings, voice calls, or make audio recordings.
10	<b>Camera storage dock</b>	This is a magnetic type of camera storage which supports pop out and retraction with just one press.


11	<b>USB-C (USB 3.2 Gen 1) port</b>	<ul style="list-style-type: none"> <li>Connects the power adapter to charge the computer.</li> <li>Connects to mobile phones, USB drives, and other external devices to transfer files.</li> </ul>
12	<b>Thunderbolt™ 4 port</b>	<ul style="list-style-type: none"> <li>Connects to Thunderbolt external storage devices for faster data transfers.</li> <li>Connects the power adapter to charge the computer.</li> <li>Connects external displays such as monitors and projectors via a docking station.</li> </ul>
13	<b>Charging indicator</b>	<p>Indicates the battery's charge status when charging:</p> <ul style="list-style-type: none"> <li>Blinks white when charging.</li> <li>Steady white when the computer is fully charged and stops charging.</li> </ul>
14	<b>Ambient Light Sensor</b>	<p>This sensor perceives ambient light in the environment and can automatically adjust system parameters.</p> <p> Do not cover the ambient light sensor with objects.</p>
15	<b>Headset jack</b>	Connects to a headset.
16	<b>HDMI port</b>	A high-definition multimedia port. Connects to external displays.
17	<b>USB-A (USB 3.2 Gen 1) port</b>	Connects to mobile phones, USB drives, and other external devices to transfer data.
18	<b>Microphone</b>	Use the microphone to conduct video meetings, voice calls, or make audio recordings.
19	<b>Speaker</b>	The speakers output sound.

## Powering on and off

When powering on the computer for the first time, connect the power adapter, and the computer will power on automatically. The computer will enter the startup screen shortly after the screen lights up.

When the computer is powered off, press the Power button until the screen or keyboard lights up to power on or wake the computer.

When using the computer, click  >  to sleep, shut down, or restart the computer.

 
 Press and hold the power button for approximately 10 seconds to force shutdown the computer. Force shutdowns may cause unsaved data to be lost. Use with caution.

## Charging the computer

The computer will display a prompt when the battery is running low. If you see this prompt, charge your computer as soon as possible or it will affect your normal use.

### Charging the computer with a power adapter

The computer features a non-removable rechargeable battery. Connect the power adapter and charging cable to charge the computer. The battery charges more quickly when the computer is powered off or in Sleep mode.

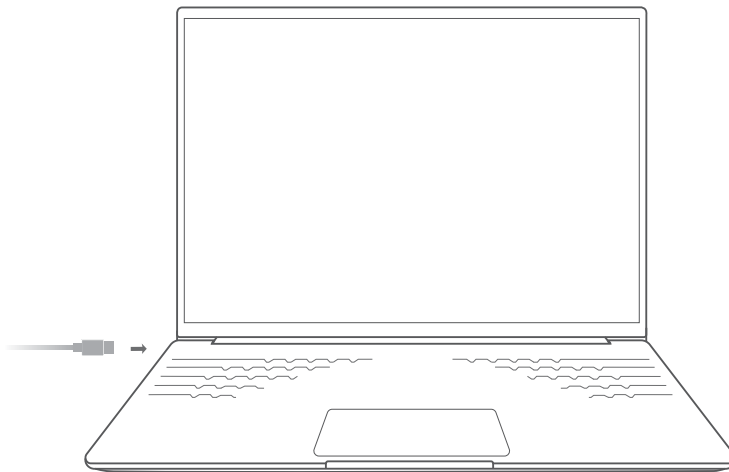

### Safety information













- Charge the computer at room temperature in a well-ventilated, shaded area. Charging the computer in hot environments may damage the internal components.
- Charging duration may vary based on the ambient temperature and battery use.
- It is normal for the computer to become warm after prolonged use or charging. If it becomes hot to the touch, disable non-essential features and disconnect the charger.
- The battery is subject to wear over time. If the computer's standby time appears to have fallen, do not attempt to replace the battery by yourself. Instead, take the computer and proof of purchase to an authorized Honor Customer Service Center for assistance.

## Keyboard

 Keyboard keys may vary depending on your device model.

### Shortcut keys

Press the Fn key and the indicator lights up, which means the F keys, such as F1 and F2, are now in shortcut (hotkey) mode to perform common actions.

 F1	Decrease screen brightness.	 F7	Enable or disable the microphone.
 F2	Increase screen brightness.	 F8	Turn off the camera.
 F3	Enable or disable the touchpad.	 F9	Switch the projection mode.
 F4	Mute or unmute.	 F10	Open HONOR PC Manager.
 F5	Decrease the volume.	 F11	Open the sidebar.
 F6	Increase the volume.	 F12	Open the screenshot tool


### Switching between shortcut and function key modes

In function key mode, the F keys have different functions depending on the software that is running.

To use the F keys as function keys, you can:

- Press the Fn key and the indicator will light up. The F keys, such as F1 and F2, will then work as shortcuts (hotkeys). To return to function key mode, press the Fn key, then the indicator will turn off.
- Press Fn+r keys to switch the screen refresh rate.
- Go to **HONOR PC Manager** settings and select **Use F1 to F12 as function keys** in **System**. Then, these keys will act as function keys by default. To switch to shortcut key mode, select **Use Fn + F1 to F12 as function keys**.

### Windows 11 new keyboard shortcuts

Key Combination	Function
Win+a	Open "Quick setup".
Win+n	Open "Notification center" and Calendar.
Win+w	Open widgets panel.
Win+z	Quick access to snap layout.  This function is only enabled when there is a window in the foreground.

## Touchpad

Discover innovative ways to navigate your laptop using touchpad gestures. From single to multi-finger presses, unlock a new level of control.


Click the icon of **HONOR PC Manager** in the taskbar to access the Control Center. Touch the icon of **Touchpad**.

- **Quick screenshot:** Tap the touchpad twice with one knuckle to capture a screenshot.
  - **Quick screen recording:** To start recording, double-tap the touchpad with two knuckles quickly and do the same to stop.
  - **Adjust brightness:** Swipe up or down along the touchpad's left edge with one finger to change screen brightness.
  - **Adjust volume:** Use one finger to slide up or down the right edge of the touchpad to modify system volume.
  - **Access Control Center:** Open the HONOR PC Manager Control Center by sliding two fingers left along the touchpad's right edge.
  - **Window management:** Tap the upper left corner to minimize and the upper right corner to close windows.
  - **Text and file management:** Select text or move files and windows by swiping left or right with three fingers.
- i** • Screenshots and recordings are saved to: **D:\HONOR Share\Screenshot**.
- Touchpad gestures are unavailable if you exit or uninstall **HONOR PC Manager**.
  - Touchpad support varies by product refer to your device's specifications.


## Getting started

### Step 1: Connecting to a network

 Click  in the lower right corner of the desktop. Select a Wi-Fi network and follow the instructions to establish a connection.

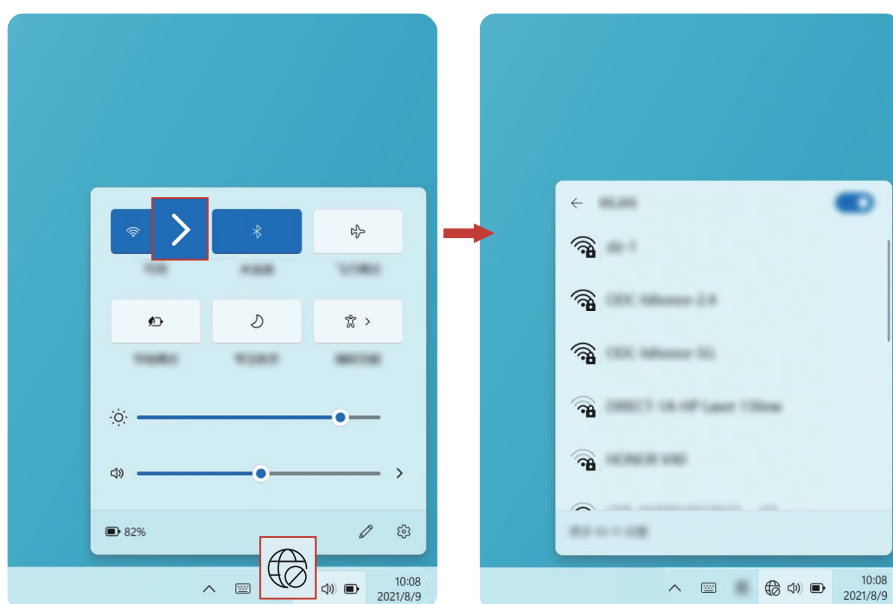



## Step 2: Activating Windows

 
Windows will activate automatically when you connect to the Internet for the first time. Click  > **Settings** > **System** > **Activation** to check if Windows has been activated. If Windows cannot be activated, restart the computer, connect to the network, and try again. If the issue persists, connect to a different network or wait a while before trying again.

 If Windows is not activated, some features on your computer may be restricted.

## Step 3: Enrolling a fingerprint


If you skipped the fingerprint enrollment process during the initial setup, click  > **Settings** > **Accounts** > **Sign-in options** > **Fingerprint recognition (Windows Hello)**. In the Sign-in option, set the Sign-in password first and then follow the instructions to enroll your fingerprint.

-  • Ensure that your fingertips are clean and dry, or your fingerprint may not be enrolled correctly.
- Each user can enroll up to 10 fingerprints.

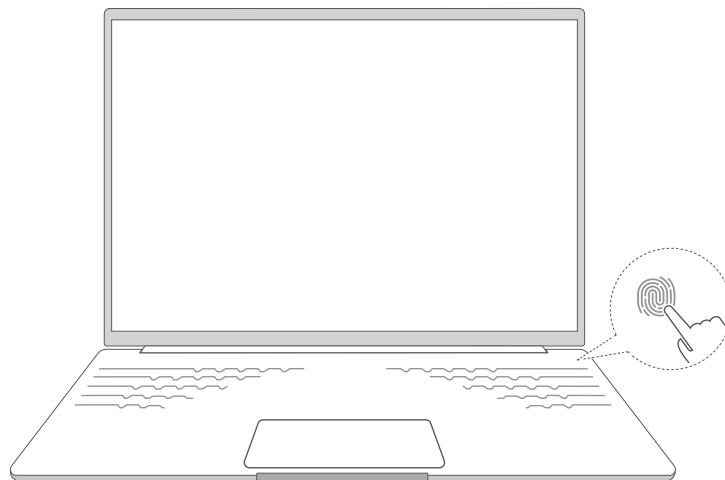

## Step 4: Updating the drivers

You can manage drivers in HONOR PC Manager. If driver updates are available, follow the instructions to complete the updates.


-  Check and update your drivers regularly to improve the stability and performance of the computer.

# Highlighted features

## HONOR Device Clone

### Device Clone with no worries.

Try it out **HONOR Device Clone** It only takes a short time to migrate pictures, videos, files, Windows settings, and browser data from the old PC to the new one, creating a seamless experience.


 Only support old computer with Windows 7/10/11 systems.

Please refer to the official website for the Windows settings and browser data that can be migrated: <https://www.honor.com/global/tech/clone/>

### Transfer data from a non-HONOR device

- 1 On the old computer and HONOR PC, enable **Bluetooth** and **Wi-Fi**, and connect the computers to the same network.
- 2 On HONOR PC, enable **HONOR PC Manager**, click **Home > Device Clone > This is the new device**.
- 3 On the old computer, download and install **HONOR Device Clone**.
- 4 On the old computer, enter the **HONOR Device Clone** app. Confirm that the connection codes are the same following the on-screen instructions. Establish a connection between the old computer and the HONOR PC.
- 5 On HONOR PC, select the data to be transferred, click **Start** to complete data cloning.

### Transfer data from an HONOR device

- 1 On the old computer and HONOR PC, enable **Bluetooth** and **Wi-Fi**.
- 2 On the HONOR PC, enable **HONOR PC Manager**, and click **Home > Device Clone > This is the new device**.
- 3 On the old computer, enable **HONOR PC Manager**, and click **Home > Device Clone > This is the old device**.
  -  If the old computer does not have **HONOR PC Manager**, install the **HONOR Device Clone** app on the old computer following the on-screen instructions.
- 4 Confirm that the connection codes are the same following the on-screen instructions on the old computer. Establish a connection between the old computer and the HONOR PC.
- 5 Select the data to be transferred on HONOR PC. Click **Start** to complete data cloning.

## Log in to Your HONOR ID

You can log in to different HONOR devices using the same HONOR ID.

On the desktop, after opening **HONOR PC Manager**, click **Log in to HONOR ID**:



- **QR code login:** On your HONOR phone/tablet, tap **Settings** > **HONOR ID**, access the QR code and scan it.
- **Password login:** Click **Password login** and enter the password.

## Cast Your Phone Screen to Your Laptop

### Connect your laptop and phone

Once your phone is connected to your laptop, you can use your laptop's mouse and keyboard to control your phone. This allows actions like transferring files and editing documents across screens, greatly boosting your productivity.

### Contact to establish connection

- 1 To use this feature, your laptop should be equipped with a sensor, either an HONOR Share sensor or the  sensor.
- 2 On your laptop, turn on Wi-Fi, Bluetooth, and **HONOR PC Manager**, and agree to User License Agreement.
- 3 Turn on NFC on your phone.
- 4 Place your phone's NFC area in contact with the HONOR Share area or  on your laptop. Once you hear a prompt tone or feel a vibration, follow the on-screen instructions to complete the connection process.

### Establish connection with a cable

- 1 Connect your laptop and phone with a USB cable.
- 2 Open **HONOR PC Manager** on your laptop and select **Screen sharing** > **Project phone to PC** > **Other ways to connect** > **Other ways to connect** > **USB**.
- 3 Follow the instructions to complete the connection on your phone.

### Disconnect your laptop and phone

- Open **HONOR PC Manager** on your laptop and select **Disconnect**.
- Swipe down from the status bar at the top of your phone screen to access the notification panel, then tap **DISCONNECT**.
- If your laptop and phone are connected with a USB cable, remove the cable to disconnect them.

### Transfer and edit files between your laptop and phone

Once the phone is connected to the laptop, you can use the mouse to drag files from the mirrored phone window to the laptop for further editing.

### Transfer files from the phone to your laptop

- Open **Gallery** or **Files** in the mirrored phone window on your desktop, then long press to select images, videos, or files using the left mouse button. Long press again until the dragging icon appears, then drag them to your laptop's folders.

- In the mirrored phone window on your desktop, select images, videos, or files, and drag them to the document you're editing on your laptop.

For instance, you can drag a photo from your phone's Gallery or a text from your phone's Notepad to an office file you're editing on your laptop.

### **Transfer files from your laptop to phone**

- Drag photos or videos from your laptop to your phone's **Gallery** in the mirrored phone window to transfer them.
- Drag files from your laptop to your phone's **Files** in the mirrored phone window to transfer them.
- Select images and text, and drag them from your laptop to the file you're editing in the mirrored phone window.

For instance, you can drag a photo from your laptop to the Notepad in the mirrored phone window.


### **Quickly edit files**


Drag text, images, audio, and video files from your phone or laptop to an app or document for quick editing.

For example, you can select a picture on the phone with the mouse, then long click and drag it to the PowerPoint presentation on the laptop.

### **Open multiple phone apps on the laptop**

Once connected, you can open 3 phone app windows at maximum on your laptop.


In the mirrored phone window on your laptop, open an app, and tap  to open a window for that app on your laptop. You can continue to open other apps on your phone. Each window is used independently and does not affect each other.

 Depending on your device, you may be able to open 1 or 3 phone windows simultaneously.

### **Answering video calls on laptop**

Once connected, you can answer audio or video calls on your laptop (such as calls in WeChat, QQ). The calls will be conducted directly through your laptop's speakers or connected cameras.

Swipe down from the status bar to call the notification panel during the call and tap **Play audio/video on phone/Play audio/video on PC** to switch devices.

-  • Update HONOR PC Manager to version 10.1 or later.
  - Some apps may not support transferring video calls to laptop.

# Share Your Laptop Screen with Your Tablet or Foldable Phone

Connect your laptop to a tablet or foldable phone to expand and complement the screen capabilities and improve work efficiency by taking advantage of Stylus.

**i** For the support of this function, please refer to the actual version of HONOR PC Manager.

## Connect laptop to tablet or foldable phone

- 1** To get started, ensure that **WLAN** and **Bluetooth** are enabled on both your laptop and your tablet or foldable phone. Make sure the screen of your tablet or foldable phone is on and unfolded (if applicable).
- 2** Open **HONOR PC Manager** on your laptop and select **Screen sharing > Project PC to tablet & foldable phone**.
- 3** Select a tablet or foldable phone from the device list, click **Connect**, and follow the instructions to complete the connection.

Once connected, you can switch between **Mirror**, **Extend** and **Share** in **Project PC to tablet & foldable phone**. You can also change audio channels.

**i** Only some HONOR tablet and foldable phones support this feature. When the screen is locked or off, the device cannot be found.

## Mirror mode

When the laptop is connected, on the **Project PC to tablet & foldable phone** interface you can select **Mirror**.

Under **Mirror**, the home screen of the tablet or foldable phone shows a similar layout to the laptop desktop.

For example, when the tablet synchronously display the laptop screen, laptop files can be edited and saved with a stylus pen on the tablet.

## Extend mode

When the laptop is connected, on the **Project PC to tablet & foldable phone** interface you can select **Extend**.

The home screen of the tablet or foldable phone shows the layout of extended display on the left or right side of the laptop desktop. Click **Extend > Display Settings**, select the relative position and sidebar location between the laptop and the tablet or foldable phone.

Under **Extend**, use the tablet or foldable phone as the second display. Open an app on your laptop, and seamlessly drag it over to the tablet or foldable with mouse.

For example, you can participate in video conferences on your tablet or foldable phone while editing PPTs on your laptop.


## Share mode

When the laptop is connected, on the **Project PC to tablet & foldable phone** interface you can select **Share**.

Click **Share > Display Settings** to specify the primary screen according to your preference.


Under **Share**, you can operate the laptop and the tablet/foldable phone simultaneously with the keyboard and mouse, and drag and edit pictures, videos, documents, and other files between the two devices.

For example, you can use your keyboard to edit documents on the tablet or foldable phone.

 Please update your HONOR tablet or foldable phone to Magic UI 6.0 and later. This feature may vary depending on your device.

## Exit Projection


When projected, disconnect by the following methods:

- Click **Project PC to tablet & foldable phone > Disconnect** to exit projection.
- Swipe down from the status bar at the top of the tablet or foldable screen to access the notification panel and tap to exit projection.
- Under Mirror/Extend mode, click  on the sidebar of the tablet or foldable phone and follow instructions to exit projection.


# Wirelessly Cast Your Laptop Screen to Larger Displays

With Wireless Projection, you can effortlessly connect your laptop to larger displays like Vision TV, without the hassle of cables, and enjoy your laptop's content on a bigger screen.

## Connect your laptop to a larger display

- 1** Make sure that both your laptop and the larger display have **Wi-Fi** and **Bluetooth** enabled, and are connected to the same network.
  -  Larger displays include Vision TV, televisions, projectors, wireless displays, and others.
    - If the larger display does not appear in **HONOR PC Manager**, make sure that it's connected to the same network.
    - If the larger display remains not found in **HONOR PC Manager** when it's connected to the same network, download Lebocast app on the larger display for screen mirroring.
- 2** Open **HONOR PC Manager** on your laptop and select **Screen sharing > Project PC to TV**.
- 3** Select the external display or wireless projector from the device list, click **Connect**, and follow the on-screen instructions to complete the projection process.

Once connected, you can switch between **Mirror** and **Extend** in **Project PC to TV**. You can also change audio channels.

-  When pairing the larger screen with your laptop for the first time, it defaults to **Mirror**. Subsequently, it will automatically enter the mode you used last time.

### **Mirror mode**

Once the projection is complete, select **Mirror** on **Project PC to TV**.

In **Mirror**, content will be synced and displayed simultaneously between your laptop and the large-screen device. The large-screen device's home screen mirrors your laptop's desktop layout.

For instance, project videos or video meetings from your laptop to the larger display for a better view.

### **Extend mode**


Once the projection is complete, select **Extend** on **Project PC to TV**.

In **Extend**, use your laptop's mouse to operate across displays, with the larger display serving as an additional display. Open an app on your laptop, and seamlessly drag it over to the larger display.

Click **Extend** > **Display settings**, to specify the primary screen according to your preference.

For instance, edit images on the larger display while simultaneously creating a PowerPoint presentation on your laptop.

### **Exit Projection**

- Click **Disconnect** on **Project PC to TV** to exit projection.
- Alternatively, click  in the task bar and follow instructions to exit projection.

## **HONOR Share**

### **Use HONOR Share to share files fast**

HONOR Share is a technology for fast wireless transfers of images, videos, documents, and other files between devices. It uses Bluetooth to discover other HONOR Share-enabled devices in the vicinity and then transfers files via a direct Wi-Fi connection. No mobile data is required during the transfer process.

### **Enable HONOR Share**

**Enable HONOR Share in any of the ways below:**

- **On the PC:** Open **HONOR PC Manager**, select **HONOR Share**, and make sure **Discoverable to other devices** is turned on.



Or you can click  > **HONOR Share** on the taskbar.

- **On the phone:** Swipe down from the status bar to access the notification panel (continue swiping down to display more content), long-press **HONOR Share** to enter the settings interface, and turn on **HONOR Share**.

### Transfer files between computers using HONOR Share

With **HONOR Share**, you can transfer documents, photos, videos, and other files to multiple nearby HONOR computers in a wireless way.


- 1 On the PCs receiving the file, enable **HONOR Share** and make sure **Discoverable to other devices** is turned on.
- 2 Go to the PC with the file and send it in either of the ways below:
  - Open **HONOR PC Manager** on the desktop, select **HONOR Share** and drag the selected file to the icons of other devices.
  - Right-click the file to be shared, select **HONOR Share** to receive the file from the device list.
- 3 Click **Accept** on the other PC to start the transfer.

Go to **HONOR PC Manager** > **HONOR Share** > **Open received files** on the devices receiving the file to see the received files.

### Share files between the PC and phone using HONOR Share


Share, view, and edit files between your computer and your HONOR phone without the need for a data cable.

#### From PC to phone:

- 1 Enable **Bluetooth** on the phone and PC.
- 2 Go to **HONOR PC Manager** > **HONOR Share** on the PC and make sure **Discoverable to other devices** is turned on.
- 3 Go to the phone, swipe down from the status bar to access the notification panel (continue swiping down to display more content), long-press **HONOR Share** to enter the settings interface, and turn on **HONOR Share**.
- 4 Select the file to be sent on the PC, right-click with the mouse and go to **Show more options** > **HONOR Share**. The computer will search for phones that have **HONOR Share** enabled. Select the phone to receive the file.
  -  You can also open **HONOR PC Manager** on the PC, select **HONOR Share** and drag the selected file to the icons of other devices.
- 5 Follow on-screen prompts to receive the file on the phone.

#### From phone to PC:

- 1 Enable **Bluetooth** on the phone and PC.

- 2 Go to the phone, swipe down from the status bar to access the notification panel (continue swiping down to display more content), long-press **HONOR Share** to enter the settings interface, and turn on **HONOR Share**.
- 3 Go to **HONOR PC Manager** > **HONOR Share** on the PC and make sure **Discoverable to other devices** is turned on.
- 4 Long press the file to be shared on your phone, tap  > **HONOR Share**, select the name of the PC and receive the file on that PC.
- 5 Follow on-screen instructions to receive the file on the PC.

Please update **HONOR PC Manager** to the latest version.

## HONOR WorkStation

HONOR WorkStation is designed to streamline your operations with a comprehensive suite of features, including Smart Connect, Notes, and Favorites Space.


Open **HONOR WorkStation** on your desktop:

- **Smart Connect:** You'll experience the convenience of the all-new MagicRing control center. Easily manage devices, features, and services right from MagicRing. Seamlessly share you laptop's mouse, keyboard, and screen with your phone and tablet, and make/take calls smoothly across your MagicRing devices.
- **Notes:** Capture your inspirations and ideas with Notes. Add various items like text, multimedia resources and documents with ease. With HONOR WorkStation, sync your notes across devices and edit them any time, anywhere.
- **Favorites Space:** Add useful items to your Favorites. Access them seamlessly across all your MagicRing devices with a simple "**drag**"-and-"**drop**" operation.

## HONOR Connect

HONOR devices logged in to the same HONOR ID can automatically connect to each other when placed close, bringing you a seamless collaboration experience across your devices.



### Enable HONOR Connect

- Log in to the same **HONOR ID** on all devices.
- Have both WLAN and Bluetooth enabled on them all.
- Open **HONOR WorkStation**, click  > **Service management**, then toggle on the switches for **Connected Notification**, **Connected Call**, and **Connected Apps**.

## Connected Call


You can transfer phone calls to a laptop logged in to the same HONOR ID.

### Getting started

- Log in to the same **HONOR ID** on your laptop and the nearby device, and have both WLAN and Bluetooth enabled.
- Open **HONOR WorkStation**, click  > **Service management**, then toggle on the Connected Call switch.
- Make sure you have turned on Connected Call on your phone.
  -  Make sure that you're not using **Screen sharing** first.
    - This function will not generate extra call costs.
    - The function is only applied to the carrier's voice call (the built-in call function of the mobile phone), and not to Wechat or Skype.

### Answer a phone call on laptop

In the lower right corner of your laptop screen, there are notifications, and you can do the following:

- To answer a call, click ANSWER.
- To reject a call, click REJECT.
- To reject a call and reply by message, click  and select Reply by message.

### Make a call on laptop

Go to **HONOR WorkStation**, select  > **Service management**, then click **Connected Call**.

- Use the dialer to make phone calls.
- Call back from the call log.
- Choose a contact to call.

### Import Contacts to your laptop

Go to **HONOR WorkStation**, select  > **Service management**, then click **Connected Call**.



- I. Click the Settings icon in the upper right corner and select Import Contacts.
- II. On the left menu bar, click Contacts and select Import Contacts.

## Connected Notification

When you use a laptop to work or entertain, notifications from your phone or tablet such as SMS, Alarm Clock, and Social media, will show on your laptop automatically. You can click to view, reply, or simply ignore.

### Getting started

- Log in to the same **HONOR ID** on your laptop and the nearby device, and have both WLAN and Bluetooth enabled.

- Open **HONOR WorkStation**, click  > **Service management**, then toggle on the Connected Notification switch.
- Make sure you have turned on Connected Notification on your phone and tablet.
-  As a receiver, the laptop can only decide whether enable this function on itself.
  - If the laptop has installed and operated the same non-system built-in app as the phone, it will not receive the app notifications. Take WeChat as an example. If you have installed and operated WeChat on your laptop, then the laptop will not receive WeChat notifications from the phone. If you have installed but not operated WeChat on your laptop, the laptop can still receive WeChat notifications.
  - To protect your privacy, notifications transferred to the laptop will hide their details automatically, and only when you point them with the mouse, can they show.

### Available devices


Laptops, mobile phones, and tablets that support HONOR Connect.

## Connected Apps

When you need to continue an app that you're browsing on another device on your laptop, simply click the prompt in the task bar, and the content will appear on your laptop, automatically starting from where you left off.

When browsing or editing a document via a third-party app on your phone, tablet, or laptop, you can seamlessly transfer it and continue your work on a more suitable device, such as a phone, tablet, or laptop.

### Getting started

- Log in to the same **HONOR ID** on your laptop and the nearby device, and have both WLAN and Bluetooth enabled.
- Open **HONOR WorkStation**, click  > **Service management**, then toggle on the Connected Apps switch.
- Make sure you have turned on Connected Apps on your phone and tablet.

### Applicable devices

Laptops, phones, and tablets that support HONOR Connect.


## Connected Input


You can share your laptop's mouse, keyboard, and touchpad with other devices, making it easy to transfer pictures and files by dragging and using shortcut keys. This allows for convenient and efficient work and study across devices.

### Share keyboard and mouse

- I. Move the cursor to touch the edge of the laptop screen twice in a row to establish a connection between the devices.
- II. Open **HONOR WorkStation**, select HONOR Connect, click Connected Input, and drag the device icons to the white area on both sides of the laptop screen. Then the connection will be established and you can enter the Connected Input mode.

### Intelligently identify/adjust device arrangement

Open **HONOR WorkStation**, click  > **Service management** > **Connected Input**, and select **Automatically adjust screen arrangement to match devices' physical positions**. Then the laptop can sense the positions of your phone and tablet. When you change their positions (such as move a device from the left side to the right side of the laptop), the mouse cursor orientation will be adjusted automatically to ensure it can jump to the phone or tablet screen in the correct direction. In order to ensure the recognition accuracy, you can place the phone and tablet on a stand support during the Connected Input, and put them within 50 cm from the edge of the laptop.


-  It requires all devices, including the phone, tablet, and laptop to support smart orientation in order to perform this function.

### Stop Connected Input

On the Connected Input page, you can drag the phone or tablet outside the working area. When the device icon changes into a device ball, it indicates it is already disconnected.

## Tethering


When Wi-Fi is unavailable, easily connect your laptop to the Internet using your phone's network with just a single click. Say goodbye to the hassle of enabling personal hotspots or manually typing passwords, and enjoy a smooth Internet experience.

- Log in to the same **HONOR ID** or both devices, and have WLAN and Bluetooth enabled.
- Open **HONOR WorkStation**, click  > **Service management**, then toggle on the **Tethering** switch.
- Make sure that you have turned on Connected Internet on your phone.

If Wi-Fi is unavailable but cellular data is accessible on your phone, simply position your laptop near the phone. You'll then receive a reminder "Available network found", prompting you to click and access the Internet using your phone's network.

## Connected Camera


Harness the power of your phone's or tablet's cameras during video meetings or live streaming on your laptop. Enjoy high resolution and eye-pleasing performance with the ability to seamlessly switch between front and back views.

- Log in to the same **HONOR ID** on your laptop and the nearby device (your phone or tablet), and have WLAN and Bluetooth enabled.
- Open **HONOR WorkStation**, click  > **Service management**, then toggle on the **Connected Camera** switch.
- Make sure you have turned on Connected Camera on your phone or tablet.



Then, you'll have the flexibility to choose between your laptop's built-in camera or your phone's or tablet's cameras—whether it's the front or rear camera—to suit your needs perfectly.

## Capture Your Inspirations Using Camera Across Your MagicRing Devices

When you are logged in to the same HONOR ID on multiple MagicRing devices, you'll be able to seamlessly perform various actions, from taking photos, text extraction, to document scanning, and more. Photos taken with your phone or tablet could instantly appear in documents you're editing on your laptop, allowing you to work with your preferred device and capture your inspirations and ideas more effectively.



- To use this feature, make sure that all devices are logged in to the same **HONOR ID** and have both **Wi-Fi** and **Bluetooth** enabled.
- Open **HONOR WorkStation**, click  > **Service management**, and toggle on the **Connected Camera** switch as need.

Let's say you're using HONOR Notes on your laptop.

- 1 Click , and select **Insert from other devices**.
  - 2 Choose the action you want on your phone or tablet, whether it's taking photos, scanning documents, or extracting text.
  - 3 The chose action will be carried out on the corresponding device, and the resulting photos or scanned documents will be instantly inserted into the note you're editing on your laptop.
-  This feature supports operation across your phone, tablet, and laptop. For the smoothest experience, refer to your actual usage.

## Favorites Space

Easily organize and access your favorite images, text, web pages, videos, documents, and more with Favorites Space. Sync them effortlessly across all your MagicRing devices for convenient review anytime, anywhere.

Go to **Favorites Space** >  > , and make sure that the desired services are turned on




- **Add Favorites:** Simply touch and hold the image, video, text, document, or other item you want to save until it lifts up, then drag it to **Favorites Space**. Release your touch, and the item will be securely saved for future access.
- **Edit Favorites:** Perform various action as needed in **Favorites Space**, such as searching, filtering, grouping.
- **Remove Favorites:** Long press a file, and drag it out of **Favorites Space** to other apps or local disks.
- **Sync Favorites:** When logged in to the same HONOR ID on multiple MagicRing devices such as your phone, tablet, or laptop, you'll be able to view and use your Favorites across the devices.

## HONOR Notes

HONOR Notes, an essential tool to improve your work and study efficiency, can help you quickly capture the fleeting thoughts and inspirations.

 This feature only applies to HONOR laptops.


### Create/Delete a note

- 1 Open Notes, and click  to create a new note.
- 2 Enter the title and content for the note. You can also do the following as needed:
  - Click the menu to change the font type, paragraph alignment or background.
  - Click  to insert an image. Touch and hold the image and drag it to a different location in the note.
  - Click  to add a checklist.
- 3 On the note list page, right click the note to be deleted, and click Delete to delete it.

### Sync notes

Enabling Stay in Sync lets you sync local notes to the cloud. Log in to your **HONOR ID** on another device such as a phone or tablet to view these notes anytime, anywhere.

Open Notes, and follow the instructions to enable this feature.

 This feature only applies to HONOR MagicBook with **HONOR PC Manager** 17.0 and above installed, and HONOR tablets and phones with MagicOS 7.0 and above.

After enabling this feature, if you delete the notes on your laptop, the data on the cloud and other devices that are logged in to the same HONOR ID will also be deleted synchronously.

### Manage notes

You can put your notes into different folders and delete unnecessary ones.

- **Categorize notes**

You can categorize your notes into different folders, add color labels to distinguish the folders, and edit them to make your notes more clearly classified and easy to find.

- **View all notes**


- On the All notes list, different notes are displayed in different colors. You can also enter keywords in the search box to quickly find the notes you need.
- In the left menu, you can view the notes of different categories such as All notes, Favorites, and Recently deleted.
- Your notes are organized into My Folder and Uncategorized folders.

- **Create/Edit/Delete notes**

Right click My Folder, select New Folder, select the folder color that you like, enter a folder name, and click Save.

Right click My Folder, select Edit Folder, select the folder color that you like, enter a folder name, and click Save.

Right click My Folder, select Delete Folder, select the file to be deleted, and delete it.

 You can create up to five folder levels.

- **Move/Collect/Pin notes**

On the note list page, right click the note to be edited, and click Move to move it to the folder as needed.

On the note list page, right click the note to be edited, and click Unfavorite or Favorite.

On the note list page, right click the note to be edited, and click Pin/Unpin.

- **Search notes**

In the Search notes box, you can search note title or content.

## Privacy Projection

Easily connect your laptop to a bigger screen using a wired connection and decide exactly what you want to share. This smart feature allows you to project only selected content or windows to the larger display, keeping your emails, chats, searches, and notifications private on your laptop screen.

- 1** Open **HONOR PC Manager**, head to **Home > Frequently used**, and click on **Privacy Projection**.
- 2** In the interface showing **desktops and windows**, choose what you want to project. Click **Start** to get things rolling.
- 3** You can change the projection window anytime by clicking **Re-project**.

 Currently, this feature is optimized for HDMI wired connections for direct screen projection.

## More Tips

### Touch the power button to unlock with fingerprint

Touch the power button with your enrolled finger to unlock the laptop.


- 1 On the taskbar, click **Windows** > **Settings** > **Account** > **Sign-in options** > **Fingerprint recognition** (**Windows Hello**) . Verify or set the account password and PIN.
- 2 Put your finger on the power button and follow the on-screen instructions to enroll your fingerprint.

 The location of the fingerprint sensor varies by model.

### Copy text from images

Easily extract text from images with a single click. Copy, edit, and perform other operations without manual typing.

#### Method 1:



- 1 On the taskbar, click **HONOR PC Manager**.
- 2 Click  to capture screenshots. Text will then be automatically recognized and displayed to the right of the screenshot.
- 3 In the text recognition result box, select the desired text and press Ctrl + C to copy the text.

#### Method 2:

Open images with the image viewer and initiate text recognition.

### Phone contacts with the laptop to record your laptop's screen

Once your phone is connected to your laptop, you can effortlessly cast games, movies and more fantastic content from your laptop to your phone with a simple shake, all while recording the screen simultaneously.

- 1 Shake your mobile device after connecting it to your laptop, then have the NFC area on the back your phone contact the HONOR Share sensor or the  on your laptop. Your phone will then ring or vibrate, indicating a successful operation, and your laptop's screen will sync to your phone, initiating the recording process.
- 2 To stop recording, simply tap  on your phone. The recording will then automatically save to your phone's Gallery.

### Relieve eye strain with Eye Comfort mode

Eye Comfort mode is designed for your laptop to reduce blue light radiation and protect your eyesight. When you're working or studying on your laptop for extended periods, particularly in low-light environments like at night, the screen will automatically adjust to warmer colors.

Right click on an empty space on your desktop, select **Show More Options > Display & Eye Comfort**, then toggle the **Eye Comfort** switch to turn it of or off.

- When Eye Comfort mode is active, the screen display will appear yellowish, which is normal.
- Please note that this feature requires **HONOR PC Manager** to be installed.

### **Restore your laptop to factory settings**

If you're experiencing issues with your laptop's system, you can perform a factory reset by following these steps;


When turning on your laptop, long press or click the **F10** key to enter Smart Restoration mode. Then, follow the on-screen prompts to initiate the factory reset process.

 
- Restoring to factory settings will delete data stored in the C drive, including desktop files, downloaded files and personal data. Please back up your important data and files in advance.



# Learn about Windows 11

## Using the Start menu

Use the Start menu to access apps, settings, and files on your computer.

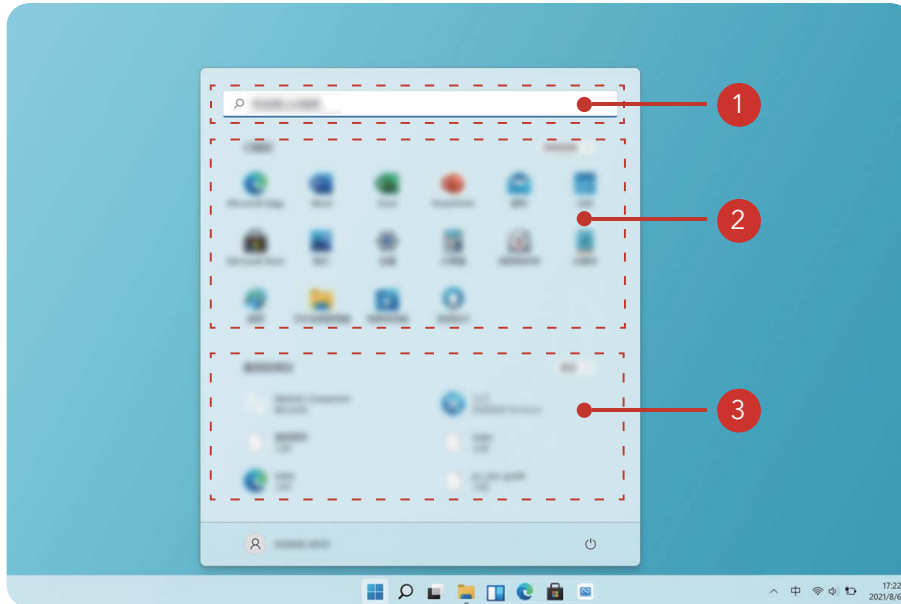Click  to open the Start menu.




- Click  to change, lock, or sign out of the current user account.
- Click  to sleep, shut down, or restart the computer.
- **1** is the search area: enter the content to be searched here.
- **2** is the application area: drag up and down to see all applications and programs.
- **3** is the recent files area: shows recently opened files and new applications.

## Action center

 In the action center, you can quickly turn on or off features or change the settings.

Press **Win+a** to open the action center. You can then:

- Quickly open Settings, projection options, and more.
- Quickly access frequently used settings (such as Battery saver, Flight mode, screen brightness, and more).

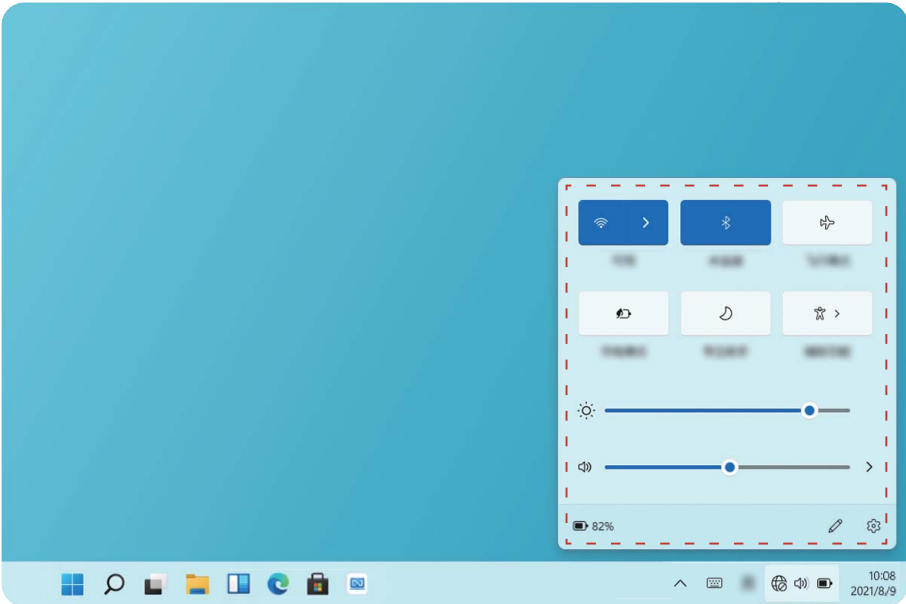


# Accessories and extensions

## Bluetooth mouse (optional)

The Honor Bluetooth mouse connects to the computer wirelessly via Bluetooth. To start using the Bluetooth mouse, you must first pair it with the computer.

### Getting to know the Bluetooth mouse

 **i** The Bluetooth mouse is an optional accessory and is sold separately.

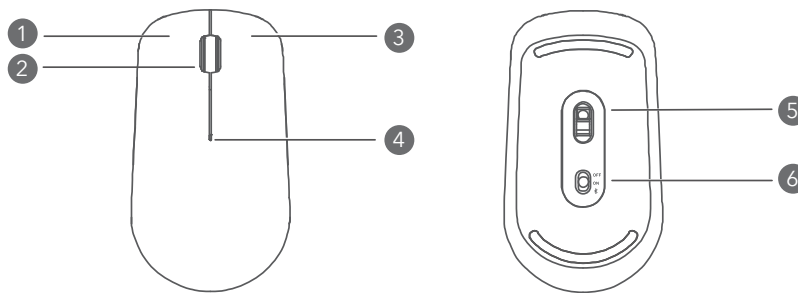


1	Left button	2	Scroll wheel + Middle button
3	Right button	4	LED indicator <b>i</b> If the indicator blinks red, the battery is low on power and should be replaced.
5	Sensor	6	Power/Bluetooth pairing switch




### Install the battery

 As illustrated below, remove the battery cover from the mark located at the bottom end of the mouse. Insert one AA battery, making sure to match the + and - signs in the battery compartment. Close the cover.

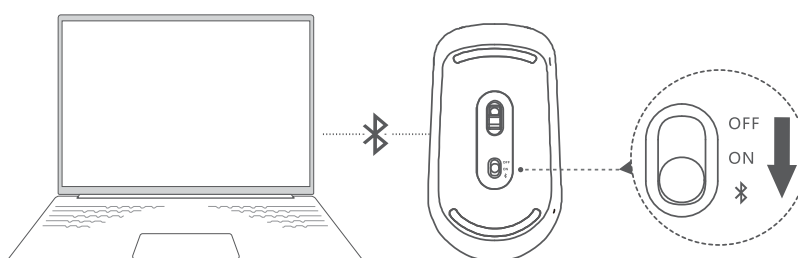

### Pairing the Bluetooth mouse with the computer



- 1 Toggle the Bluetooth pairing switch at the bottom of the mouse to  for approximately 3 seconds. Once the indicator starts blinking, the Bluetooth mouse is ready to pair.
- 2 On your computer, click  >  > **Bluetooth & devices**, click **Add device** to add Bluetooth devices, and choose HONOR Mouse in the Bluetooth device list. Allow a few moments for pairing to complete.

# About this user guide

This user guide is only for use with associated computers that run the Windows 11 operating system. In this guide, you will learn about the basic features of your computer. For more information about Windows 11 features, visit <https://www.microsoft.com>.

The optional accessories and software described in this guide may not be available or up-to-date. The system environment described in this guide may vary from your actual system environment. Images in this manual may differ from the actual product. All illustrations are for reference only. Actual product may differ.

## Indicators

---



Highlights important information and tips, and provides additional information.

---



Indicates potential issues that may lead to damage, data loss, and other unexpected problems if left unattended.

---



Warns of potential hazards that can result in serious personal injury if not circumvented.

---

# Safety information

This section contains important information about the operation of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.


## Electronic device

Do not use your device if using the device is prohibited. Do not use the device if doing so causes danger or interference with other electronic devices.

## Interference with medical equipment

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device where prohibited.
- Some wireless devices may affect the performance of hearing aids or pacemakers. Consult your service provider for more information.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If using a pacemaker, hold the device on the side opposite the pacemaker and do not carry the device in your front pocket.

## Protecting your hearing when using a headset

-  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Using a headset at high volumes may damage your hearing. To reduce this risk, lower the headset volume to a safe and comfortable level.
- Exposure to high volumes while driving may cause distraction and increase your risk of an accident.

## Areas with flammables and explosives

- Do not use the device where flammables or explosives are stored (in a gas station, oil depot, or chemical plant, for example). Using your device in these environments increases the risk of explosion or fire. In addition, follow the instructions indicated in text or symbols.
- Do not store or transport the device in containers with flammable liquids, gases, or explosives.

## Traffic security

- Observe local laws and regulations while using the device. To reduce the risk of accidents, do not use your wireless device while driving.
- Concentrate on driving. Your first responsibility is to drive safely.

- RF signals may affect the electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- Do not place the device over the air bag or in the air bag deployment area in a motor vehicle. Doing so may hurt you because of the strong force when the air bag inflates.
- Wireless devices may interfere with the airplane's flight system. Do not use your device where wireless devices are not allowed according to the airplane company's regulations.

### **Operating environment**

- Avoid dusty, damp, or dirty environments. Avoid magnetic fields. Using the device in these environments may result in circuit malfunctions.
- Do not use your device during thunderstorms to protect your device against any danger caused by lightning.
- Ideal operating temperatures are 0 °C to 35 °C. Ideal storage temperatures are -10 °C to +45 °C. Extreme heat or cold may damage your device or accessories.
- Do not expose your device to direct sunlight (such as on a car dashboard) for prolonged periods.
- To protect your device or accessories from fire or electrical shock hazards, avoid rain and moisture.
- Keep the device away from sources of heat and fire, such as a heater, microwave oven, stove, water heater, radiator, or candle.
- Stop using your device or applications for a while if the device is overheated. If skin is exposed to an overheated device for an extended period, low temperature burn symptoms, such as red spots and darker pigmentation, may occur.
- Do not allow children or pets to bite or suck the device or accessories. Doing so may result in damage or explosion.
- Observe local laws and regulations, and respect the privacy and legal rights of others.

### **Child's safety**

- Comply with all precautions with regard to child's safety. Letting children play with the device or its accessories may be dangerous. The device includes detachable parts that may present a choking hazard. Keep away from children.
- The device and its accessories are not intended for use by children. Children should only use the device with adult supervision.

### **Accessories**

- Using an unapproved or incompatible power adapter, charger or battery may cause fire, explosion or other hazards.
- Choose only accessories approved for use with this model by the device manufacturer. The use of any other types of accessories may void the warranty, may violate local regulations and laws, and may be dangerous. Please contact your retailer for information about the availability of approved accessories in your area.

**Charger safety**

- For pluggable devices, the socket-outlet shall be installed near the devices and shall be easily accessible.
- Unplug the charger from electrical outlets and the device when not in use.
- Do not drop or cause an impact to the charger.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using it at once. Continued use may lead to electric shocks, short circuits, or fire.
- Do not touch the power cord with wet hands or pull the power cord to disconnect the charger.
- Do not touch the device or the charger with wet hands. Doing so may lead to short circuits, malfunctions, or electric shocks.
- Ensure that the charger meets the requirements of Clause Q.1 in IEC62368-1/EN62368-1 and has been tested and approved according to national or local standards.
- Connect the device only to products with the USB-IF logo or with USB-IF compliance program completion.

**Battery safety**

- Do not connect battery poles with conductors, such as keys, jewelry, or other metal materials. Doing so may short-circuit the battery and cause injuries or burns.
- Keep the battery away from excessive heat and direct sunlight. Do not place it on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode if overheated.
- Do not attempt to modify or remanufacture the battery, insert foreign objects into it, or immerse or expose it to water or other liquids. Doing so may lead to fire, explosion, or other hazards.
- If the battery leaks, ensure that the electrolyte does not make direct contact with your skins or eyes. If the electrolyte touches your skins or splashes into your eyes, immediately flush with clean water and consult a doctor.
- In case of battery deformation, color change, or overheating while charging or storing, immediately stop using the device and remove the battery. Continued use may lead to battery leakage, fire, or explosion.
- Do not put batteries in fire as they may explode. Damaged batteries may also explode.
- Dispose of used batteries in accordance with local regulations. Improper battery use may lead to fire, explosion, or other hazards.
- Do not allow children or pets to bite or suck the battery. Doing so may result in damage or explosion.
- Do not smash or pierce the battery, or expose it to high external pressure. Doing so may lead to a short circuit or overheating.

- Do not drop the device or battery. If the device or battery is dropped, especially on a hard surface, it may be damaged.
- If the device standby time shortens significantly, replace the battery.
- This device contains a built-in battery. Do not attempt to replace the battery by yourself. Otherwise, the device may not run properly or the battery may get damaged. For your personal safety and to ensure that your device runs properly, you are strongly advised to contact a Honor authorized service center for a replacement.

### **Cleaning and maintenance**

- Keep the device and accessories dry. Do not attempt to dry it with an external heat source, such as a microwave oven or hair dryer.
- Do not expose your device or accessories to extreme heat or cold. These environments may interfere with proper function and may lead to fire or explosion.
- Avoid collision, which may lead to device malfunctions, overheating, fire, or explosion.
- Before you clean or maintain the device, stop using it, stop all applications, and disconnect all cables connected to it.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device or accessories. These substances may cause damage to parts or present a fire hazard. Use a clean, soft, and dry cloth to clean the device and accessories.
- Do not place magnetic stripe cards, such as credit cards and phone cards, near the device for extended periods of time. Otherwise the magnetic stripe cards may be damaged.
- Do not dismantle or remanufacture the device and its accessories. This voids the warranty and releases the manufacturer from liability for damage. In case of damage, contact a Honor authorized service center for assistance or repair.
- If the device screen is broken in a collision, immediately stop using the device. Do not touch or attempt to remove the broken parts. Promptly contact a Honor authorized service center.

### **Disposal and recycling information**



The symbol on the product, battery, literature, or packaging means that the products and batteries should be taken to separate waste collection points designated by local authorities at the end of the lifespan. This will ensure that EEE waste is recycled and treated in a manner that conserves valuable materials and protects human health and the environment.

For more information, please contact your local authorities, retailer, or household waste disposal service or visit the website <https://www.honor.com/>.

**Reduction of hazardous substances**

This device and its electrical accessories comply with local applicable rules on the restriction of the use of certain hazardous substances in electrical and electronic equipment, such as EU REACH regulation, RoHS and Batteries (where included) directive. For declarations of conformity about REACH and RoHS, please visit the website <https://www.honor.com/global/legal/certification/>.

**Restrictions in Norway**

Use of this radio equipment is not allowed in the geographical area within a radius of 20 km from the center of Ny-Ålesund, Svalbard.

# Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Use the following measures to help you protect your personal information:

- Put your device in a safe place to prevent unauthorized use.
- Set your device screen to lock and set a password or unlock pattern.
- Do not open messages or emails from strangers to prevent your device from becoming infected with a virus.
- When using your device to browse the Internet, do not visit websites that might pose a security risk to avoid your personal information from being stolen.
- If you use services such as the portable Wi-Fi hotspot or Bluetooth, set passwords for these services to prevent unauthorized access. Turn these services off when they are not in use.
- Install device security software and regularly scan for viruses.
- Using unauthorized third-party software to update your device may damage your device or put your personal information at risk. It is recommended that you update through your device's online update feature or download official update packages for your device model from Honor.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Honor or authorized third-party application providers.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Some third-party application providers may collect detection and diagnostic information on your device to improve their products and services.

# Legal Notice

**Copyright © Honor Device Co., Ltd. 2024. All rights reserved.**

The product described in this manual may include copyrighted software of Honor and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.


## **Trademarks and Permissions**

The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by *Bluetooth SIG, Inc.* and any use of such marks by Honor Device Co., Ltd. is under license.

Wi-Fi<sup>®</sup>, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are trademarks of Wi-Fi Alliance.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Microsoft and Windows are trademarks of the Microsoft group of companies.

 For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, DTS:X, DTS:X Ultra, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2024 DTS, Inc. ALL RIGHTS RESERVED.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

## **Notice**

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Honor reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

## **Third-Party Software Statement**

Honor does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Honor will not provide any warranty of any kind for third party software and applications. Neither will Honor provide support to customers who use third-party software and applications, nor be responsible or liable for the functions or performance of third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time, and Honor does not guarantee the availability of any content or service. Third-party service providers provide content and services through network or transmission tools outside of the control of Honor. To the greatest extent permitted by applicable law, it is explicitly stated that Honor shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Honor shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works in any form, including but not limited to texts, images, videos, or software etc. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

## **DISCLAIMER**

ALL CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HONOR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORESEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HONOR ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

## **Import and Export Regulations**

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

## **Privacy Policy**

To better understand how we protect your personal information, please see the privacy policy at <https://www.honor.com/privacy-policy/worldwide/>.

**For More Help**

Visit <https://www.honor.com/global/support/> for the most up-to-date contact information for your country or region.

ALL PICTURES AND ILLUSTRATIONS IN THIS GUIDE, INCLUDING BUT NOT LIMITED TO THE DEVICE COLOR, SIZE, AND DISPLAY CONTENT, ARE FOR YOUR REFERENCE ONLY. THE ACTUAL DEVICE MAY VARY. NOTHING IN THIS GUIDE CONSTITUTES A WARRANTY OF ANY KIND, EXPRESS OR IMPLIED.